



Generac Battery Backup Re-Enable/Reset Instructions

1. If the battery remote shutdown switch is flipped to the "Off" position, it will disable the Generac Inverter and Battery.
2. If someone flips the remote shutdown switch back to "On", you must re-enable the Generac inverter.
3. **Important Note:** the following instructions can also be followed to reset the Generac setup.
4. Instructions:

- a. This should be the screen you see whenever the inverter is shutdown:



i.

- b. Click the center button and a message will appear. Make sure to click "Confirm".



i.

- c. You'll see this display screen.



i.

- d. Click the right arrow button and find the inverter page.



i.

- e. Click the center button, then click “Enable” and “Confirm”.




i.

- f. Once the inverter is enabled, click the right arrow key and get to the battery page.



i.

- g. Click the center button, then click “Enable” and “Confirm”.

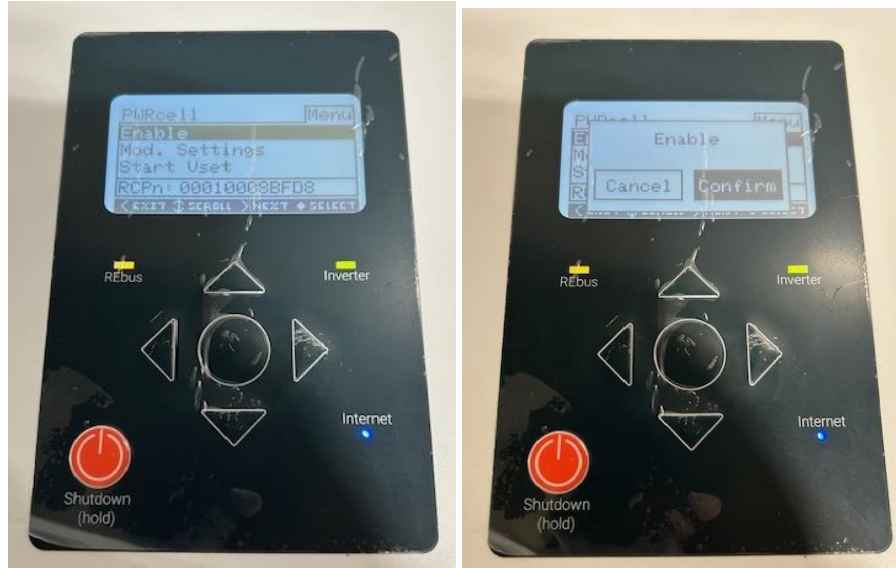

i.

5. The battery remote shutdown switch only disconnects power to the battery. It will not disconnect line voltage.